


Baterie Duracell Olympus Li-40B, 3,6V (3,7V) - 630mAh

Kód (DR9664)

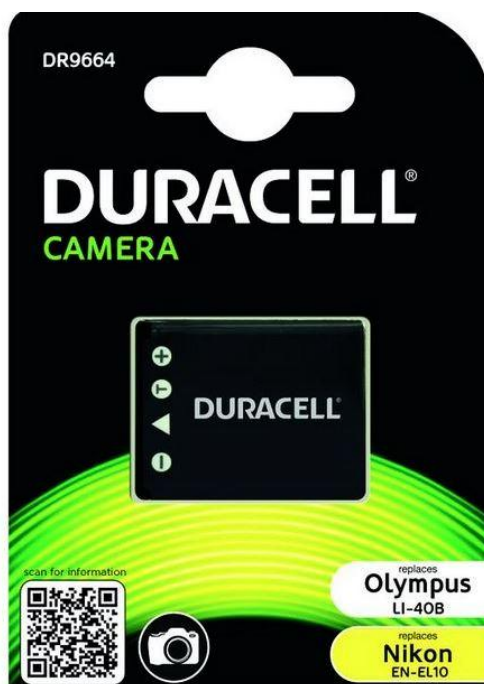

Kompatibilita dle výrobního čísla:

D-LI108, DLI-216, D-LI63, DR9664, DS5370, D016, D016-05-8023, EN-EL10, GB-10A, KLIC-7006, LI-40B, LI-42B, NP45, NP-45, NP-45A, NP-45B, NP-80, NP-82, NP-82DBA, N2153992, VFB10101, 02491-0066-00, 35030471

Kompatibilita dle modelu:

AGFA

Optima 1, Optima 100, Optima 102, Optima 103, Optima 104, Optima 105, Optima 145, Optima 3, Optima 830UW

BENQ

DC E1030, DC E1035, DC E1230, DC E1250, DC E1260 DC E1280, DC T1260, DC W1220, LM100

CASIO

Exilim EX-G1, Exilim EX-G1BK, Exilim EX-G1RD, Exilim EX-H50, Exilim EX-H50BK, Exilim EX-H50RD, Exilim EX-H50WE, Exilim EX-H60, Exilim EX-H60BK, Exilim EX-H60RD, Exilim EX-H60WE, Exilim EX-JE10, Exilim EX-JE10BK, Exilim EX-JE10PK, Exilim EX-JE10WE, Exilim EX-N1, Exilim EX-N1BE, Exilim EX-N1BK, Exilim EX-N1PK, Exilim EX-N1RD, Exilim EX-N1WE, Exilim EX-N10, Exilim EX-N10BK, Exilim EX-N10GD, Exilim EX-N10VP, Exilim EX-N2, Exilim EX-N2BK, Exilim EX-N2RD, Exilim EX-N20, Exilim EX-

N20BE, Exilim EX-N20BN, Exilim EX-N20RD, Exilim EX-N5, Exilim EX-N5BE, Exilim EX-N5BK, Exilim EX-N5BN, Exilim EX-N5PK, Exilim EX-N5RD, Exilim EX-N5SR, Exilim EX-N5WE, Exilim EX-N50, Exilim EX-N50BE, Exilim EX-S5, Exilim EX-S5PK, Exilim EX-S5SR, Exilim EX-S6BE, Exilim EX-S6BK, Exilim EX-S6PK, Exilim EX-S6SR, Exilim EX-S7BK, Exilim EX-S7PE, Exilim EX-S8, Exilim EX-S8BE, Exilim EX-S8BK, Exilim EX-S8PE, Exilim EX-S8PK, Exilim EX-S8SR, Exilim EX-S9, Exilim EX-ZS100, Exilim EX-ZS100BK, Exilim EX-ZS100RD, Exilim EX-ZS100SR, Exilim EX-ZS150, Exilim EX-ZS150BK, Exilim EX-ZS150GD, Exilim EX-ZS150GN, Exilim EX-ZS150VP, Exilim EX-ZS170, Exilim EX-ZS170GD, Exilim EX-ZS170PK, Exilim EX-ZS200, Exilim EX-ZS5, Exilim EX-ZS5BK, Exilim EX-ZS5EO, Exilim EX-ZS5PK, Exilim EX-ZS5SR, Exilim EX-ZS6, Exilim EX-ZS6BK, Exilim EX-ZS6PK, Exilim EX-ZS6RD, Exilim EX-ZS6SR, Exilim EX-Z1, Exilim EX-Z115, Exilim EX-Z2, Exilim EX-Z27, Exilim EX-Z270, Exilim EX-Z28, Exilim EX-Z28BK, Exilim EX-Z28PK, Exilim EX-Z28SR, Exilim EX-Z280, Exilim EX-Z280SR, Exilim EX-Z32, Exilim EX-Z33BE, Exilim EX-Z33BK, Exilim EX-Z33PK, Exilim EX-Z33SR, Exilim EX-Z33VP, Exilim EX-Z330, Exilim EX-Z335, Exilim EX-Z35, Exilim EX-Z35BE, Exilim EX-Z35BK, Exilim EX-Z35PE, Exilim EX-Z35PK, Exilim EX-Z35SR, Exilim EX-Z350, Exilim EX-Z550, Exilim EX-Z550BE, Exilim EX-Z550BK, Exilim EX-Z550PK, Exilim EX-Z550RD, Exilim EX-Z550SR, Exilim EX-Z800, Exilim EX-Z800BE, Exilim EX-Z800BK, Exilim EX-Z800PK, Exilim EX-Z800SR, Exilim EX-Z800VP, Exilim EX-Z800YW, Exilim EX-Z88, Exilim Hi-Zoom EX-H5, Exilim Hi-Zoom EX-H5BK, Exilim Hi-Zoom EX-H5RD, Exilim Hi-Zoom EX-H5SR, Exilim QV-R100, Exilim QV-R100BK, Exilim QV-R100RD, Exilim QV-R100SR, Exilim QV-R200, Exilim QV-R200BK, Exilim QV-R200PE, Exilim QV-R200SR, Exilim QV-R200WE, Exilim QV-R70, Exilim QV-R80, Exilim Zoom EX-Z16, Exilim Zoom EX-Z16BK, Exilim Zoom EX-Z16PK, Exilim Zoom EX-Z16RD, Exilim Zoom EX-Z16SR, Exilim Zoom EX-Z26, Exilim Zoom EX-Z37, Exilim Zoom EX-Z37BK, Exilim Zoom EX-Z37PE, Exilim Zoom EX-Z37PK, Exilim Zoom EX-Z37RD, Exilim Zoom EX-Z37SR, Exilim Zoom EX-Z370, Exilim Zoom EX-Z670

FUJIFILM

FinePix JV100, FinePix JV105, FinePix JV150, FinePix JV155, FinePix JV160, FinePix JV200, FinePix JV205, FinePix JV250, FinePix JV255, FinePix JV500, FinePix JX200, FinePix JX205, FinePix JX250, FinePix JX255, FinePix JX280, FinePix JX300, FinePix JX305, FinePix JX350, FinePix JX355, FinePix JX360, FinePix JX370, FinePix JX375, FinePix JX380, FinePix JX400, FinePix JX405, FinePix JX420, FinePix JX500, FinePix JX520, FinePix JX530, FinePix JX540, FinePix JX550, FinePix JX580, FinePix JX590, FinePix JX680, FinePix JX700, FinePix JX710, FinePix JZ100, FinePix JZ110, FinePix JZ200, FinePix JZ250, FinePix JZ260, FinePix JZ300, FinePix JZ305, FinePix JZ310, FinePix JZ500, FinePix JZ505, FinePix JZ700, FinePix J10, Finepix J100, Finepix J110W, FinePix J12, FinePix J120, Finepix J15, FinePix J15fd, FinePix J150W, FinePix J20, FinePix J210, FinePix J25, FinePix J250, FinePix J26, FinePix J27, FinePix J30, FinePix J35, FinePix J38, FinePix L30, FinePix L50, FinePix L55, FinePix T200, FinePix T205, FinePix T300, FinePix T305, FinePix T310, FinePix T350, FinePix T360, FinePix T400, FinePix T410, FinePix T500, FinePix T510, FinePix T550, FinePix T560, FinePix XP10, FinePix XP11, FinePix XP15, FinePix XP20, FinePix XP22, FinePix XP30, FinePix XP31, FinePix XP50, FinePix XP60, FinePix Z10fd, FinePix Z100fd, FinePix Z1000EXR, FinePix Z1010EXR, FinePix Z110, FinePix Z115, FinePix Z20fd, FinePix Z200fd, FinePix Z2000EXR, FinePix Z250fd, FinePix Z30, Finepix Z300, FinePix Z31, FinePix Z33WP, FinePix Z35, FinePix Z37, FinePix Z70, FinePix Z700EXR, FinePix Z707EXR, FinePix Z71, FinePix Z80, FinePix Z800EXR, FinePix Z808EXR, FinePix Z81, FinePix Z90, FinePix Z900EXR, FinePix Z909EXR, FinePix Z91, FinePix Z950EXR

GE

E1450W

HYUNDAI
S800**KODAK**

EasyShare MD30, EasyShare Mini, EasyShare M200, EasyShare M22, EasyShare M23, EasyShare M522, EasyShare M530, EasyShare M531, EasyShare M532, EasyShare M5350, EasyShare M5370, EasyShare M550, EasyShare M552, EasyShare M575, EasyShare M577, EasyShare M580, EasyShare M583, EasyShare M750, EasyShare M873 Zoom, EasyShare M883 Zoom, EasyShare Touch
NIKON Coolpix S203, Coolpix S210, Coolpix S220, Coolpix S230, Coolpix S3000, Coolpix S4000, Coolpix S500, Coolpix S5100, Coolpix S520, Coolpix S570, Coolpix S60, Coolpix S600, Coolpix S700, Coolpix S80

OLYMPUS

Camedia X-600, D-630 Zoom, FE-150, FE-150 Zoom, FE-160, FE-190, FE-20, FE-220, FE-220D, FE-230, FE-240, FE-250, FE-280, FE-290, FE-300, FE-3000, FE-3010, FE-320, FE-330, FE-340, FE-350, FE-350 Grand Angle, FE-350 Wide, FE-360, FE-4000, FE-4010, FE-4030, FE-4050, FE-5000, FE-5010, FE-5020, FE-5030, FE-5050, FE-5500, IR-300, mju TOUGH-3000, mju 1040, mju 1050 SW, mju 1060, mju 1200, mju 5000, mju 60, mju 700, mju 7000, mju 710, mju 720, mju 720 SW, mju 720SW, mju 725 SW, mju 730, mju 770 SW, mju 770SW, mju 780, mju 790 SW, mju 790SW, mju 795 SW, mju 795SW, mju 820, mju 830, mju 840, mju 850 SW, mju 850SW, mju-5010, mju-550WP, mju-7020, mju-7030, mju-7040, mju-7050, SP-700, Stylus 1200, Stylus 7010, Stylus 710 Digital, Stylus 720 SW, Stylus 730, Stylus 740, Stylus 750, Stylus 760, Stylus 770 SW, Stylus 780, Stylus 790SW, Stylus 820, Stylus 830, Stylus 840, Stylus 850 SW, STYLUS-550WP, STYLUS-7000, TG-310, TG-320, Tough 725SW, Tough 770SW, X-785, X-790, X-795, X-800, X-905, X-915, X-920, X-935, X-960, X-970

PENTAX

Efina, Optio LS1000, Optio LS1100, Optio LS465, Optio L36, Optio L40, Optio M30, Optio M40, Optio M90, Optio M900, Optio NB1000, Optio RS1000, Optio RS1500, Optio T30, Optio V10, Optio W30

SANYO

Xacti VPC-E1403, Xacti VPC-E1403EX, Xacti VPC-T1060, Xacti VPC-T700, Xacti VPC-T700T, Xacti VPC-T850

SONY

bezdrátová myš VGP-BMS77